

# MARKER USAGE GUIDE

	Nib	Water-resistant	Recycology	Metal	Glass	Plastic	Rubber	Wood	Cardboard	Paper	Material	CD/DVD	White board	Slate Chalk board
N50/S/XL/60		●		●	●	●	●	●	●	◐	●	●		
NF450		●		●	●	●	●	●	●	◐	●	●		
NN50/60		●	●	●	●	●	●	●	●	●	●	●		
N75W		●		●	●	●	●	●	●	●		●		
N850/60		●		●	●	●	●	●	●	●	●	●		
X100W/WL/WS		●		●	●	●	●							
NMS51		●	●	●	●	●	●	●	●	●	●	●		
NM10		●		●	●	●	●	●	●	●	●	●		
NMS50		●	●	●	●	●	●	●	●	●	●	●		
NMF50		●		●	●	●	●			●		●		
MWL5M/MWL6		●								●			●	
MWL5S/6S		●								●			●	
MWL5SBF		●								●			●	
MWL5W		●								●			●	
MW85/86		●								●			●	
SMW26/56*		●	● <small>SMW26</small>	●	●	●			●	●			●	●
MMP20/MFP10 MSP10/MMP10		●		●	●	●	●	●	●	●				

\*SMW26/56 are suitable for use on conventional slate chalk boards and glass. Do not use on vinyl, wood and painted MDF 'chalk' boards. For removal tips from suitable surfaces please visit the product section of our website [www.pentel.co.uk](http://www.pentel.co.uk).

Heavy duty permanent marker ink may 'bleed' through light paper. Always test suitability before extensive use.

Permanent markers are not recommended for use by young children. SMW26 has a reversible bullet tip and chisel tip

