ORENZ

Mechanical Pencil

What's special about new Orenz?

With its unique one-click technology Orenz allows you to write or draw without the need to keep advancing the lead while you use your pencil. The Orenz anti-breaking lead protection system provides the reassurance of no more broken leads.




ONE CLICK, non-stop writing!



Automatic sliding sleeve!



NO breaking lead!

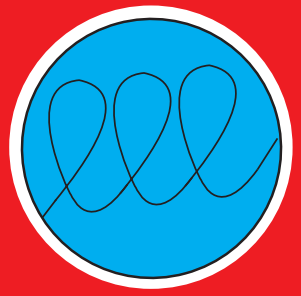

Constant writing line!

ORENZ

Mechanical Pencil

One click anti-lead breaking system, with unique lead protection

- **Including 0.2mm, the world's finest mechanical pencil, ideal for plans and fine detail**
- **0.3mm – ideal for fine detail and drawing**
- **0.5mm – perfect for drawing or writing**

Don't forget your refill leads!

Original Super Hi-Polymer or AIN STEIN refills offer superior strength, smoothness and dark colour. Perfect for your Orenz pencil.

Orenz 0.2mm XPP502 – refill lead code C502
Orenz 0.3mm XPP503 – refill lead code 300 or C273
Orenz 0.5mm XPP505 – refill lead code C505 or C275

Your Pentel Orenz stockist

Pentel (Stationery) Ltd, Hunts Rise, South Marston Park, Swindon, Wilts. SN3 4TW.Tel. 00 44 (0) 1793 823333.
Fax. 00 44 (0) 1793 823366.
Email: salesoffice@pentel.co.uk

For more information visit www.pentel-orenz.com

www.pentel.co.uk

NEW!

Pentel

ORENZ

MECHANICAL PENCIL


ANTI-BREAKING LEAD PROTECTION SYSTEM

Ideal for plans and details

UNIQUE!





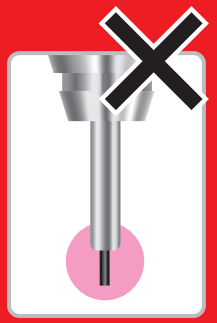

ONE CLICK, NON-STOP WRITING


ORENZ
Mechanical Pencil

UNIQUE!

ANTI-BREAKING LEAD PROTECTION SYSTEM

How does it work?

The metal sleeve slides up automatically as the lead is used, offering maximum lead protection and non-stop writing for you.

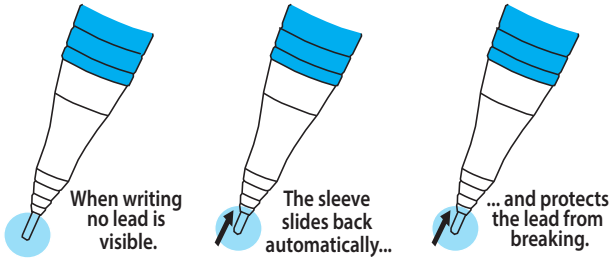

So, how do I use Orenz?

Orenz is fundamentally different from all other mechanical pencils in that once you've advanced your lead as described you don't need to advance the same lead again. When you've prepared your pencil for use the lead should not protrude below the metal sleeve.



0.2mm also available in black barrel

Here's what to do

When using for the first time after purchase

- Click the end cap until you can see the lead emerge just below the metal sleeve. Then, keep the cap depressed and gently push the lead back inside the sleeve as shown in Fig. 1.

You're now ready to start using your pencil.


Subsequent use

Before writing

- Click the end cap only once to advance the sleeve with the lead inside
- Adjust the length of the lead so that it is the same length as the sleeve and does not protrude below it (Fig. 1)
- Take care: advancing too much lead may cause the lead to break during writing (Fig. 2). The sleeve will slide up automatically as the lead is used (this protects the lead). If it slides up completely it means the lead is finished and it's time to advance another (Fig. 3)
- Click the end button only once to load the next lead (Fig. 3)
- When you've finished using your Orenz pencil for the time being retract the sleeve fully into the pencil mechanism





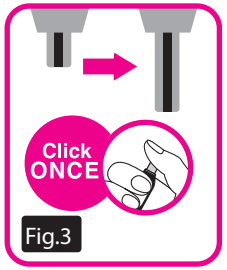



Won't the sleeve scratch the paper?

No, it won't, because it has a specially rounded end that enables you to produce smooth writing and drawing without damaging the paper. (Fig. 4)

Caution

- To be used for writing and drawing only
- To prevent suffocation or injury do not put the end cap, eraser, clearing pin, sleeve or any other parts into your mouth
- Handle small, sharp parts such as the clearing pin and sleeve with special care
- Keep out of the reach of infants
- Dropping the pencil may cause malfunctions

What should I do if....

The lead doesn't come out or is jammed?

- Carefully remove the end cap and eraser. (There is a clearing pin attached to the eraser of the 0.2mm pencil only)
- Gently unscrew the front cone and remove it
- Pull out the sliding part carefully, then use the clearing pin (0.2mm only) or a refill lead of the same size to remove the jammed lead in the clutch mechanism

CLICK ONCE

NON-STOP WRITING WITHOUT ADVANCING THE LEAD

Pentel
www.pentel.co.uk